
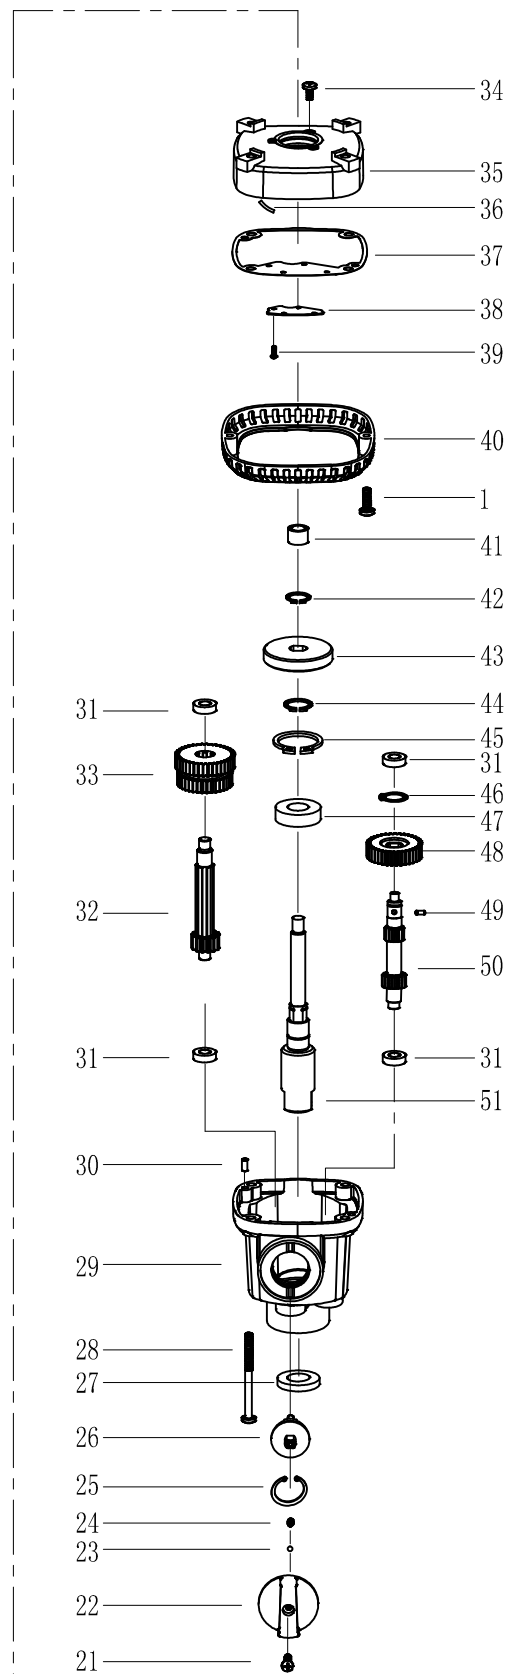


M14 - M16 - M18N - M21

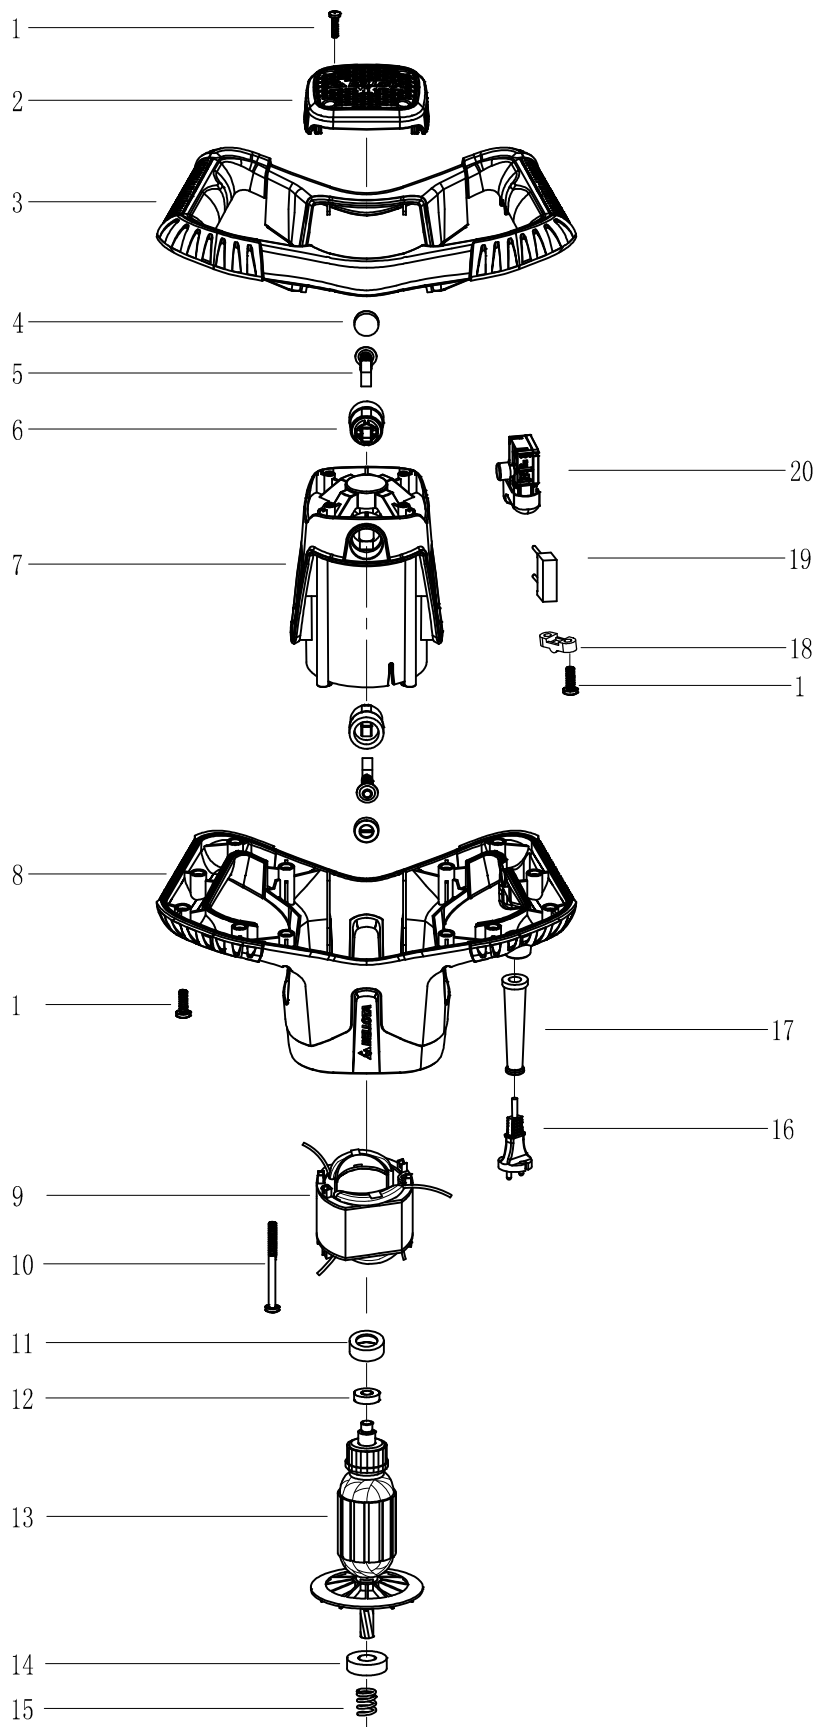

STO M14-M14110V-M16-M18N-M21 / SPARE PART LIST M14-M14110V-M					VARIANTE QUE CONTIENE REPUESTO				
FIG	Descripción componentes	Ref. Bellota	Unidad	Código de	M14	M141	M16	M18N	M21
1	Tirafondo ST3.9X14	M14M16R01	12	067101	X	X	X	X	X
2	Tapa trasera "M14"	M14R02	1	067187	X	X			
2	Tapa trasera "M16"	M16R02	1	067224			X		
2	Tapa trasera "M18N"	M18NR02	1	091373				X	
2	Tapa trasera "M21"	M21R02	1	091397					X
3	Mango superior rojo "M14 & M16"	M14M16R03	1	067361	X	X	X		
3	Mango superior negro "M18N & M21"	M18NM21R03	1	091434				X	X
4	Tapa de la escobilla pequeña	M14M16R04	6	067385	X	X	X		
4	Tapa de la escobilla grande	M18NM21R04	6	091458				X	X
5	Escobilla de carbón pequeña	M14M16R05	6	067408	X	X	X		
5	Escobilla de carbón grande	M18NM21R05	6	091472				X	X
6	Portaescobillas pequeña	M14M16R06	6	067422	X	X	X		
6	Portaescobillas grande	M18NM21R06	6	091496				X	X
7	Carcasa negra "M14 & M16"	M14M16R07	1	067446	X	X	X		
7	Carcasa roja "M18N & M21"	M18NM21R07	1	091519				X	X
8	Mango inferior rojo "M14 & M16"	M14M16R08	1	067460	X	X	X		
8	Mango inferior negro "M18N & M21"	M18NM21R08	1	091533				X	X
9	Estator M14	M14R09	1	067491	X				
9	Estator M14110V	M14110VR09	1	067514		X			
9	Estator M16	M16R09	1	067538			X		
9	Estator M18N	M18NR09	1	091557				X	
9	Estator M21	M21R09	1	091588					X
10	Tirafondo ST4.8X70	M14M16R10	12	067552	X	X	X	X	X
11	Soporte de rodamientos "M14 & M16"	M14M16R11	12	067965	X	X	X		
11	Soporte de rodamientos "M18N & M21"	M18NM21R11	12	091601				X	X
12	Rodamiento 608 "M14 & M16"	M14M16R12	12	068399	X	X	X		
12	Rodamiento 608 "M18N & M21"	M18NM21R12	12	091632				X	X
13	Rotor M14	M14R13	1	068504	X				
13	Rotor M14110V	M14110VR13	1	068528		X			
13	Rotor M16	M16R13	1	068627			X		

13	Rotor M18N	M18NR13	1	091656				X	
13	Rotor M21	M21R13	1	091670					X
14	Rodamiento 6001	M14M16R14	6	068689	X	X	X	X	X
15	Muelle de retorno de aceite	M14M16R15	12	068733	X	X	X	X	X
16	Conector de cable M14&M1	M14M16R16	6	068757	X		X	X	X
16	Conector de cable M14110V	M14110VR16	6	068771		X			
17	Cubierta del cable	M14M16R17	12	068825	X	X	X	X	X
18	Placas de presión	M14M16R18	12	068856	X	X	X	X	X
19	Condensador	M14M16R19	12	068948	X	X	X	X	X
20	Interruptor negro	M14M16R20	5	068979	X	X	X		
20	Interruptor rojo	M18NM21R20	5	091700				X	X
21	Tornillo M4X12 (triple)	M14M16R21	12	068993	X	X	X	X	X
22	Mando de control de velocidad	M14M16R22	12	069037	X	X	X	X	X
23	Bola de acero Ø4	M14M16R23	12	069051	X	X	X	X	X
24	Muelle de control de velocidad	M14M16R24	12	069105	X	X	X	X	X
25	Anillo de retención para orificio	M14M16R25	12	069129	X	X	X	X	X
26	Varilla del regulador de velocidad	M14M16R26	12	069143	X	X	X	X	X
27	Retén de aceite 20x26x5	M14M16R27	12	069211	X	X	X	X	X
28	Tirafondo ST4.8X55	M14M16R28	12	069259	X	X	X	X	X
29	Caja de cambios	M14M16R29	1	069297	X	X	X	X	X
30	Perno Ø4X8	M14M16R30	12	069334	X	X	X	X	X
31	Cojinete 698	M14M16R31	12	069389	X	X	X	X	X
32	Eje motriz trifásico	M14M16R32	6	069488	X	X	X	X	X
33	Mecanismo de transmisión s	M14M16R33	3	069518	X	X	X		
33	Mecanismo de transmisión s	M18NM21R33	3	091755				X	X
34	Tornillo de cabeza grande M	M14M16R34	12	069556	X	X	X	X	X
35	Cubierta media	M14M16R35	3	069587	X	X	X	X	X
36	Tubo de aspiración de aceite	M14M16R36	12	069907	X	X	X	X	X
37	Retén de aceite	M14M16R37	12	069945	X	X	X	X	X
38	Tapa del depósito de aceite	M14M16R38	12	069983	X	X	X	X	X
39	Tornillo M3X8	M14M16R39	12	070439	X	X	X	X	X
40	Tapa antiviento	M14M16R40	12	070583	X	X	X	X	X

41	Rodamiento HK1010	M14M16R41	12	070910	X	X	X	X	X
42	Anillo protector 15	M14M16R42	12	071092	X	X	X	X	X
43	Engranaje principal	M14M16R43	3	071153	X	X	X	X	X
44	Anillo protector 17	M14M16R44	12	071177	X	X	X	X	X
45	Anillo de retención para orifi	M14M16R45	12	071207	X	X	X	X	X
46	Anillo protector 10	M14M16R46	12	071245	X	X	X	X	X
47	Rodamiento 6003	M14M16R47	12	071283	X	X	X	X	X
48	Engranaje primario	M14M16R48	6	071320	X	X	X	X	X
49	Perno Ø3X5	M14M16R49	12	071368	X	X	X	X	X
50	Eje del engranaje	M14M16R50	6	071443	X	X	X		
50	Eje del engranaje secundario	M18NM21R50	6	091793				X	X
51	Eje de salida	M14M16R51	3	071474	X	X	X	X	X